



Wax Stacks Assembly


2 handle panels

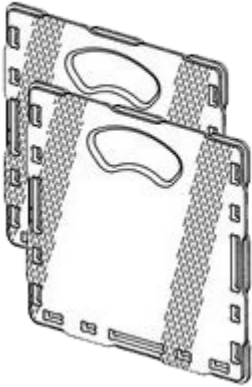

2 middle panels with grooves (woodworker lingo: dado)

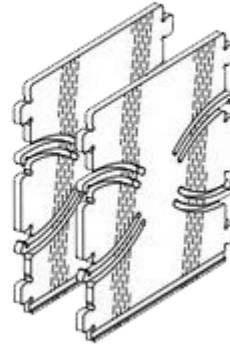

1 bottom panel

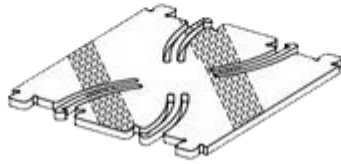

Insert the 2 side and the bottom panels into one of the handle panels. The bottom panel fits into the grooves in the side panels, so orient the grooves to be opposite the location of the handle.

Locking tabs: The crates are designed with flexible locking tabs. Once inserted through the mating panel, stick your fingers on the lower part of the curved X arms. Gently pull towards the center to click the locking tab into place. The arm is designed to flex in and up at the same time.

Stacking: The easiest way to stack crates is to orient the stacking ridges similarly rather than mirroring each other. Note the center-most tab on crate to the right. It is outside on the left and inside on the right. To stack the next crate need only be flipped around.

Last, but not least: When placing the remaining handle panel simply align all the dog-bones and tabs and press straight down to secure the panel. Ensure locking tabs are engaged.

